
## **Explanation 3: Installation for a pre-assembled Quarter-Turn**


The pre-assembled DIRAK Quarter-Turns can be installed in the cutout according to the instructions to the left.

 This is made possible by the special shape of the cams and the housings. Attention: The above mentioned installation is not possible for H-dimensions <13mm or thick doors.

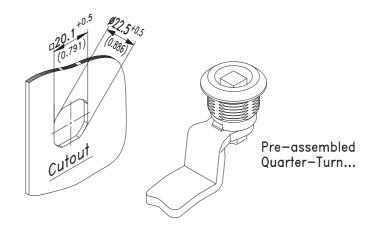




...slip Quarter—Turn through cutout...

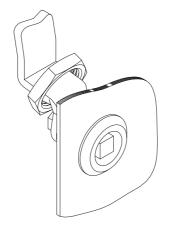

...slide nut over the cam against the housing...

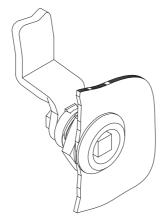

...tighten nut...

...the Quarter—Turn is completely fitted.